


### **Schatten Banjo Pickup BJ-02 Series with Jack Assembly**

#### Pickup Installation Instructions:

- 1) With the resonator removed, and the banjo laying upside down so that you may look at the coordinating rods and the underside of the head, you should be able to see the imprints of the bridge feet on the head. The proper placement of the pickup is on the inside surface of the head directly under the center foot of the bridge. The length of the pickup is approximately the same as the length of that center foot.
- 2) The pickup is prewired to the NBJA jack assembly. Before gluing the pickup into place you must thread the pickup through a hole in the resonator flange at the point where you want to mount the jack assembly.
- 3) The suggested method of attaching the pickup to the underside of the head is by using a little bit of the supplied 5 minute epoxy. After mixing the glue, apply a small amount sparingly to the brass surface of the pickup that will be pressed into contact with the head.
- 4) Making sure that you have the pickup in the correct position under the center foot of the bridge, hold the pickup in place until the glue sets (about 4 minutes).
- 5) After the glue is set, it is suggested that you take a bit of tape and tape the wire to the coordinator rods. This is to eliminate the possibility of the wire rattling.

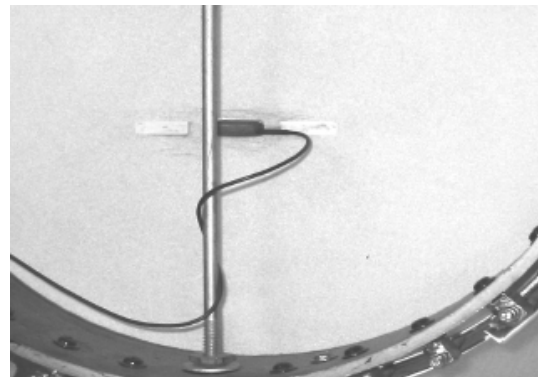

#### Jack Assembly Installation Instructions:

- 1) The banjo jack assembly is secured to the tensioning hooks of the instrument in the same manner that a banjo armrest is attached. The two screws that go through the jack assembly thread into a long metal nut that is slid in behind the hooks.
- 2) The jack assembly is normally placed at about the 4 o'clock position relative to the front of the banjo (when viewed from the front with the neck sticking straight up).

#### NBJA, NBJAplus Jack Assemblies

- 1) Remove one of the two mounting screws that go through the jack body and loosen the other screw almost all the way off.
- 2) From the end that you've removed the mounting screw, slide the metal nut as far as it will go in behind one of the tensioning hooks. Then, when there is clearance for the other end of the aluminum nut, slide the nut part way back so that the nut is behind both hooks.
- 3) Re-insert the screw that had been removed from the jack body.
- 4) Position the jack assembly and tighten the two screws to hold the NBJA securely in place.



New Rosewood Bodied Jack Assembly

#### Simple Metal Jack Assembly

- 1) Remove the output jack from the bracket.
- 2) Position the bracket where it is to be mounted.
- 3) Slide the long metal nut behind the tensioning hooks and secure the bracket in place with the two supplied screws.
- 4) Reinstall the output jack

#### Pickup Removal Instructions:

The pickup is glued to the underside of the head with 5 minute epoxy. This glue bond may be broken as follows:

- 1) Remove the strings and bridge, remove the resonator from the back of the instrument.
- 2) From the outside of the banjo, warm up the area of the head covering the pickup using a hair drier.
- 3) Work a small thin object such as a palette knife or thin feeler gauge into the joint between the pickup and the banjo head.
- 4) The pickup should come away from the head with little effort.

#### Warranty

We warrant to the original purchaser that our pickups are free from defects in materials and workmanship for a period of 2 (two) years. Should a product fail to perform properly within the specified warranty period you may contact your dealer or Schatten Design for instructions. No product will be accepted for warranty return by Schatten Design without a Return Authorization number.